

SLIDING DOORS (3275)

Install end panel(s), scribing fillet(s), units and shelving as ordered or as built on site.


Cut top track to length, if required, and screw through ceiling into predetermined joists as diagram A; or affix to local-made fascia / drop pelmet.

Cut bottom track to length, if required, and screw into threshold plate or floor, through carpet if preferred, aligned as diagram A.

Holding bottom of door away from track, INSERT the guides into the top track, and SNAP wheels into bottom track, as diagram B.

REMEMBER TO HANG REAR RUNNING DOORS FIRST

Adjust doors as required (*clockwise lowers door, counter-clockwise raises door*) using a PHILLIPS screwdriver on screws inside bottom wheels as diagram C. Recommended depth of wardrobe with end panel is normally 650mm, but can be varied to suit.

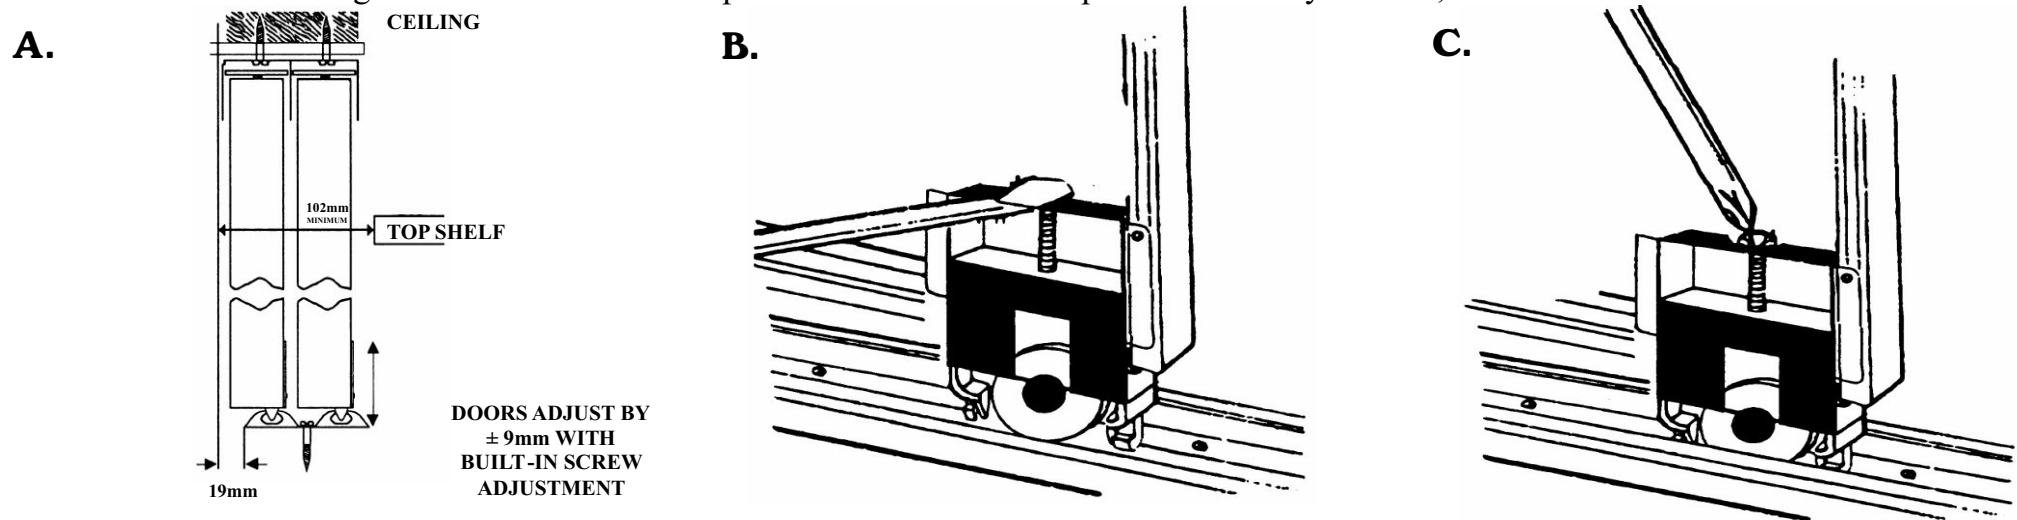

ENSURE THAT DOORS ARE NOT FOULE D ON WARDROBE INTERNALS, CARPET OR FRAME FIXINGS. PERIODIC MAINTENANCE AND CLEANING OF GUIDES AND WHEELS MAY BE REQUIRED TO ENSURE LONG LIFE AND TROUBLE FREE OPERATION.