


Swan-Robes Pivot Doors Series 4500


1. Trim Tracks to Fit Opening

Using a fine tooth hacksaw, cut the top and bottom tracks 1/16" (2mm) shorter than the opening width.

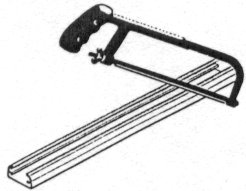

2. Install Top and Bottom Tracks


Screw in the tracks at a minimum of 1/2" (13mm) in from the jamb face. This will ensure that the door does not protrude from the opening while it is closed. Be sure that the pivot brackets have been fastened in the tracks prior to installation (1 7/8" (48mm) from the wall).

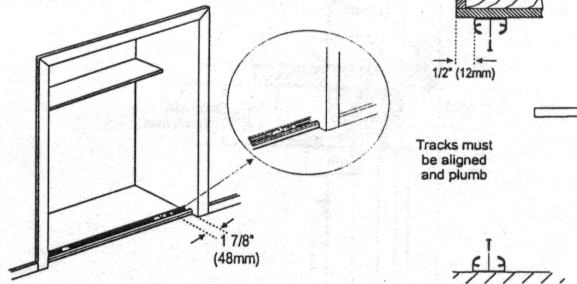

3. Install Door


Insert the top pivot into the pivot bracket, then place the bottom pivot into the bracket in the bottom track.

Note: For heavier doors you may prefer to insert the bottom pivot first.

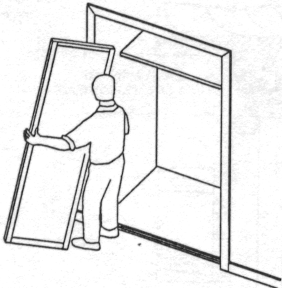


4. Fasten Magnets

Install the magnet brackets behind the top and the bottom tracks so that the door will butt against the magnets when closed. The alternative is to fasten only the magnets directly to the door jamb at the top and bottom of the door.

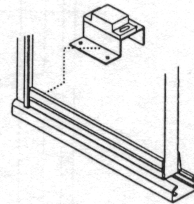

5. Adjust Door

For vertical adjustment and plumb door use a star screwdriver to adjust the bottom pivot as shown. Then tighten the screw in the top connector. The lateral adjustment can be achieved by moving the pivot bracket in the top and bottom tracks.

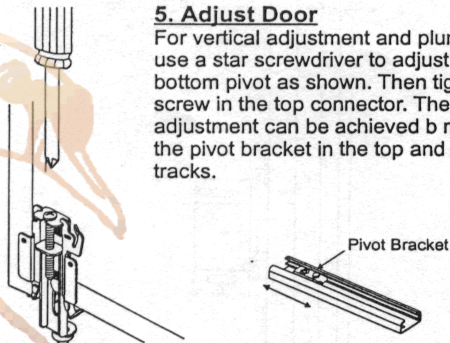

6. Attach Pull

Locate the pull at the desired height (approximately 40" (1016mm)). Drill a 7/32" (8mm) diameter hole in the panel and attach the pull with a #8 x 1" (25mm) screw (DSH P/N 90040).

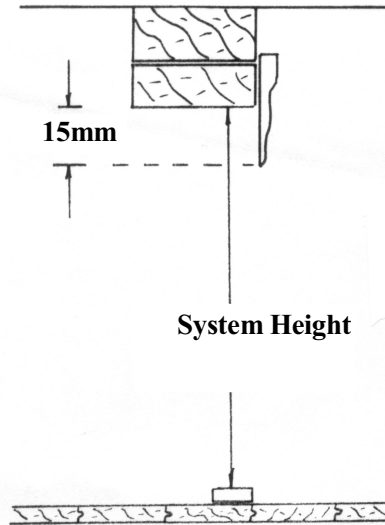
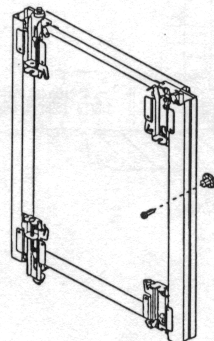


Diagram A.

Install end panel(s), scribing fillet(s), units and shelving as ordered or as built on site. Cut top track to length, if required and screw through ceiling into framework. Fit jamb bracket (see below) and screw into threshold plate or floor, through carpet if preferred. Remember to fit out the top track prior to fitting. Diagram A indicates the recommended drop down overlap of the top facing, it is however recommended that the door be fully installed first before fitting surrounding facings.

Instead of a bottom track, an adjustable doorjamb is included, consisting of a steel 'L' shaped bracket and sliding nylon insert. This fitting must only be used for holding the door at the bottom. Screw the 'L' shaped door bracket into place at the bottom of the opening, with the longer piece of the bracket flat against the threshold plate. When installed the door jamb provides the same adjustment of the door as that of the top track. Only one magnet is required per door panel, and should be located at the top of the opening, this is supplied with an adjustment bracket. The handle supplied for mirror does not require screwing or drilling, remove the backing of the handle and place in the desired location on the door. Please note that the handle will require at least 24 hours to cure and once installed cannot be removed.